

	Measured value
	Limit value overshoot red
	Limit value undershoot blue
	Outside of measuring range
	Sensor breakage
	Sensor voltage too low
	Red triangle - further menus available
	Parameters can be - but are not yet - programmed
	Parameters can be - and are already - programmed
	Blue triangle - help text available
	Measured value smoothed
	Relative to reference value
	Measured value corrected or scaled
	Averaging in progress
	Output function Diff, Hi, Lo, M(t), alarm
	Temperature compensation fixed, measured
	Atm. pressure compensation fixed, measured
	Rechargeable battery status full / almost empty / charging
	Memory status empty / almost full

	Press and hold down the ON / OFF switch
	Call up desired menu; Press, hold down: save menu
	Call up home menu
	Start the meas. operation; programming is no longer possible
	Stop the measuring operation
	Manual measuring
	Call up local menu
	Call up a function
	Activate a function
	Switch the function ON / OFF
	Selection box
	Page back / forward

Keyboards



Any sensors can be connected

Easy operation

**ALMEMO® 710**  
Quick start guide



