


Overview Menu Wireless Sensor

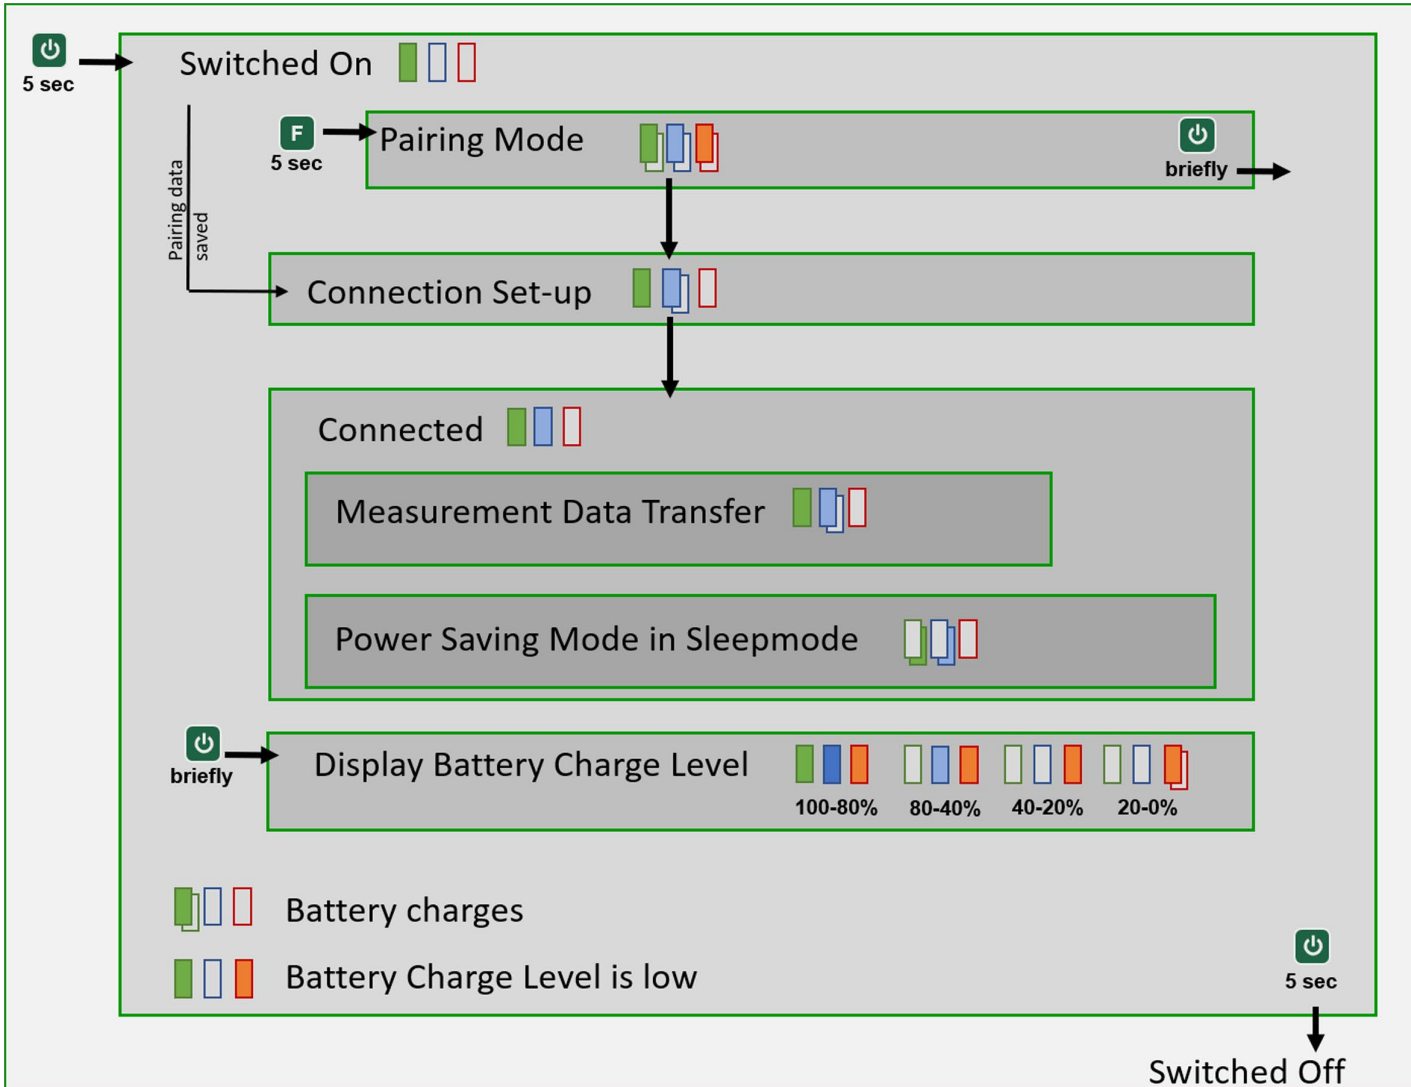


Quick guide
ALMEMO® 470 Wireless Sensor


- Legende**
- Key
 - Hold period
 - LEDs off
 - LEDs light up
 - LEDs are flashing
 - LEDs flash rarely
 - Time sequence

English
V2.0
2020/08/25





Charge the Wireless Sensor

 Plug the micro USB connector of the mains adapter into the micro USB port on the underside of the wireless sensor, and put the mains plug into a power socket.




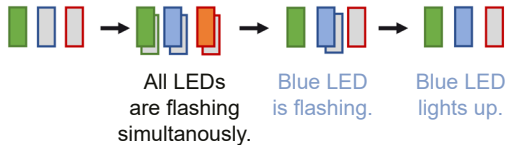
Switch on the Wireless Sensor

 Press and hold the button  for 5 seconds.




Pair Wireless Sensors

 **F** ! In the data logger, the serial number of the wireless sensor must be entered as pairing key in the menu Settings > Wireless network > Sensor pairing. Press and hold the key **F** for 5 seconds.




Recognize Sleepmode



 The sleepmode has to be activated in the datalogger. In the power saving mode the blue and the green LEDs light up once every 10 seconds.


Transfer Measurement Data

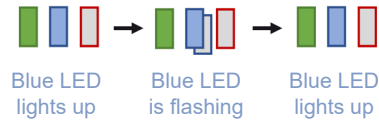When the sensor is connected, the measurement data will be transferred according to the output cycle.




Query Battery Charge Level

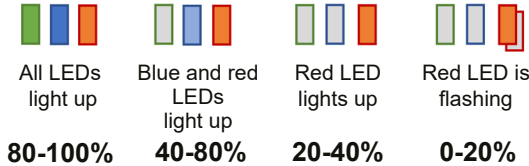

 Press briefly the button  briefly

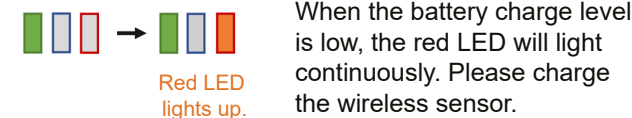

Detect low Battery Charge Level



Switch off the Wireless Sensor

 Press and hold the button  for 5 seconds.



Legende



You will find the present and further Instruction Manuals, as well as the ALMEMO® Manual on www.ahlborn.com under the tab **SERVICE** on **DOWNLOADS**.

Despite greatest diligence, the possibility of incorrect information cannot be excluded. Subject to technical modifications without prior notice.

© Ahlborn Mess- und Regelungstechnik GmbH 2020

Ahlborn Mess- und Regelungstechnik GmbH,
Eichenfeldstraße 1,
D-83607 Holzkirchen, Germany
Tel. / Phone +49(0)8024/3007-0,
Fax +49(0)8024/30071-0
Internet: <http://www.ahlborn.com>,
Email: amr@ahlborn.com

PLEASE KEEP THIS SHORT INSTRUCTION MANUAL FOR FURTHER REFERENCE